



In some cases it may be necessary to adjust the unit's tension. This takes seconds, literally and ***can be done while the unit is mounted in boat.***

To adjust controls: Place throttle arm and/or detent in the slightly forward position. Using a 3/16" allen wrench, reach through the black rubber to the 3/16" set screw. Tighten or loosen as needed.

Reminder: Rubber boots should be lubricated periodically.